# **Hejny** Rentals, Inc.

Contractor, Lawn & Garden, and Party Equipment Rentals 1829 White Bear Ave. - Maplewood, MN 55109

Phone: 651-770-3841 – Fax: 651-770-1725 www.hejnyrental.com

#### **Pneumatic Nail Guns & Staplers**

#### **Safety Instructions**

- 1. Eye protection which conforms to ANSI specifications and provides protection against flying particles both from the front and side should always be worn by the operator and others in the work area when loading, operating, or servicing this tool. Eye protection is required to guard against flying fasteners and debris which could cause severe injury.
- 2. The operator must ensure that proper eye protection is worn. Eye protection equipment must conform to the requirements of the American National Standard Institute, ANSI 87.1-1979 and provide both frontal and side protection. Note: Non-side shielded spectacles and face shields alone do not provide adequate protection.
- 3. Caution! Ear protection may be required in some environments. As the working area may include exposure to high noise levels which can lead to hearing damage. The operator should ensure that any necessary hearing protection is provided and used by others in the work area.

#### **Air Supply and Connections**

Warning! Do not use supply sources which can potentially exceed 200 p.s.i.g. as the tool may burst, possibly causing injury. Only 70 p.s.i. to 110 p.s.i. is required.

Warning! The connector on the tool must not hold pressure when the air supply is disconnected. If a wrong fitting is used, the tool can remain charged with air after disconnecting and thus will be able to drive a fastener even after the air line is disconnected possibly causing injury. Warning! Do not pull trigger or depress contact arm while connected to the air supply as the tool may cycle, possibly causing injury. Warning! Always disconnect air supply:

- 1. Before making adjustments.
- 2. When servicing the tool.
- 3. When clearing a jam.
- 4. When tool is not in use.
- 5. When moving to a different work area.

As accidental actuation may occur, possibly causing injury.

#### **Loading Tool**

- 1. Hold the tool upright and disconnect the air supply hose from tool.
- 2. Depress the magazine latch.
- Open magazine.
- 4. Position the tool on its side so that the magazine is facing up.
- 5. Insert (2) finish nail strips into the magazine. As long as the tool is on its side, the finish nail strips will be held in place by the magnets in the magazine.
- 6. Close the magazine. Make sure the magazine latch is securely fastened.
- 7. Hold the tool upright and connect air supply hose.
- 8. The tool is now ready to drive nails.

#### Warning! When loading tool:

- 1. Never place a hand or any part of body in fastener discharge area of tool.
- Never point tool at anyone.
- 3. Do not pull the trigger or depress the trip as accidental actuation may occur.

#### Operation

- 1. The nailer is equipped with a sequential cycle system. The safety must be pushed against the work surface so that the tool can operate when the trigger is pulled.
- 2. To actuate the tool, the safety yoke must be activated first, then the trigger.

## **Need It. Rent It!**

Warning! Always handle the tool with care. Never engage in horseplay, never pull the trigger unless the nose is directed toward the work, and always keep others a safe distance from the tool. Accidental actuation may occur, possibly causing injury.

Warning! The operator must not hold the trigger pulled on contact arm tools except during fastening operation as serious injury could result if the trip accidentally contacted someone or something, causing the tool to cycle.

Warning! Keep hands and body away from the discharge area of the tool. A contact arm tool may bounce from the recoil of driving a fastener and an unwanted second fastener may be driven, possibly causing injury.

Warning! Check operation of the contact arm mechanism frequently. Do not use the tool if the arm is not working correctly as accidentally driving of an fastener may result. Do not interfere with the proper operation of the contact arm mechanism.

Warning! Do not drive fasteners on top of other fasteners as this may cause deflection of fasteners which could cause injury.

### **Need It. Rent It!**