

Hejny Rentals, Inc.

Contractor, Lawn & Garden, and Party Equipment Rentals
1829 White Bear Ave. - Maplewood, MN 55109
Phone: 651-770-3841 – Fax: 651-770-1725
www.hejnyrental.com

DOSKO STUMP CHIPPER

CAUTION

- Read all instructions and decals before starting.
- Wear only proper safety clothing; safety glasses, sturdy footwear, gloves, face shield, etc.
- Operate grinder only from correct position.
- Never start grinder before checking controls, brake, and allow no one near grinder while in use.
- Always lock brake before grinding begins.
- Never allow anyone in area while grinding.
- Never leave grinder unattended.
- Never grind anything other than stumps.
- Always position machine to protect windows and vehicles from flying debris.
- Always be prepared for emergencies, by having first-aid supplies and fire extinguisher.
- Never remove guards or shields, and never attempt to override any safety devices.
- Never use in bad or questionable weather.
- Always shut the machine off if any unusual noise or vibration occurs.
- Always store machinery and gasoline away from the reach of any children.
- Questions? Call your authorized Dosko dealer or the factory at 909-885-0988.

TOWING INSTRUCTIONS

- Be sure tow hitch socket is bolted tightly.
- Position tow bar into socket, then insert lock pin with safety clip.
- Connect grinder to vehicle using a 1-7/8" or 2" ball.
- Never tow exceeding 45 MPH.
- Be sure the safety chain is properly hooked to the vehicle and stump grinder by using the coupling links.
- Be sure the wheels are fastened tightly and that tire conditions and air pressure are OK.
- Make sure brake is released.
- Always be cautious when backing.

BEFORE GRINDING STUMPS

- Be aware of, watch for safety and dangerous situations.
- Be aware of all underground utilities before grinding stumps.
- Protect windows and vehicles from possible flying debris.

STARTING GRINDER

- Press down on handle bar so that cutter wheel is off the ground.
- Pull out on-off switch (located on control panel).
- Pull choke if engine is cold (located on engine).
- Set throttle about 1/4 open (located on engine).
- If equipped, turn engine switch to "on" position (located on engine).
- Engage operator presence switch by pulling up on handle bar bow (small diameter bars).
- Pull recoil start handle/cord (located on engine).
- When engine starts, close choke.
- Pull throttle to full open.

Need It. Rent It!

SETTING UP GRINDER

- Position stump grinder cutter wheel at front edge of stump.
- Raise or lower handle bar to comfortable position.
- Pull down on brake lever to lock brake.

GRINDING STUMPS

- Push grinder to stump so that stump is located just in front of cutter wheel.
- Using the brake lever, lock the one wheel.
- Pull throttle to full open (located on engine).
- Lower the cutter wheel slowly using a left-to-right motion to grind the stump.
- Grind stump to desired depth.
- Handle bar may have to be adjusted to accommodate for height of stump or desired depth.

Need It. Rent It!