

Hejny Rentals, Inc.

Contractor, Lawn & Garden, and Party Equipment Rentals
1829 White Bear Ave. - Maplewood, MN 55109
Phone: 651-770-3841 – Fax: 651-770-1725
www.hejnyrental.com

POPCORN MACHINE

CAUTION: THE MOTOR AIR INTAKE & EXHAUST HOLES ARE ON THE TOP OF THE MACHINE, MUST KEEP CLEAR AT ALL TIMES.

OPERATION

WITH ALL SWITCHES IN THE OFF POSITION, PROCEED IN THE FOLLOWING ORDER TO START POPPING CORN.

1. PLUG IN.
2. TURN "ON" THE CORN WARMING SWITCH.
3. TURN ON THE KETTLE SWITCH. RED PILOT LIGHT SHOULD LIGHT. ALLOW 5-7 MINUTES TO PREHEAT KETTLE.
4. TURN ON THE AGITATOR MOTOR SWITCH, LOCATED ON THE RIGHT SIDE ON THE KETTLE. THE MOTOR SHOULD ALWAYS BE RUNNING WHEN CORN IS IN THE KETTLE.
5. PUT IN PREMEASURED OIL, AND PREMEASURED CORN.
6. WHEN CORN STOPS POPPING DUMP IMMEDIATELY BY TURNING KETTLE HANDLE CLOCKWISE ABOUT 90 DEGREES
7. START NEXT BATCH OF CORN IF DESIRED.
8. TURN OFF THE KETTLE & MOTOR WHEN DESIRED AMOUNT OF CORN IS POPPED.
9. LEAVE LIGHT ON FOR KEEPING POPPED CORN WARM.

CLEANING

BE SURE TO CLEAN THE POPCORN MACHINE BEFORE RETURNING IT TO THE RENTAL STORE. THERE WILL BE A CLEANING CHARGE IF NOT RETURNED CLEAN. CLEAN WITH MILD SOAP AND WARM WATER. DO NOT USE ANY ABRASIVES TO CLEAN AS IT WILL SCRATCH THE GLASS.

THERE IS A \$25 CLEANING CHARGE IF NOT RETURNED CLEANED.

Need It. Rent It!