

Hejny Rentals, Inc.

Contractor, Lawn & Garden, and Party Equipment Rentals
1829 White Bear Ave. - Maplewood, MN 55109
Phone: 651-770-3841 – Fax: 651-770-1725
www.hejnyrental.com

KODAK CAROUSEL 80 SLIDE PROJECTOR WITH REMOTE

Note: If you use an 80-slide tray, rotate the metal plate on the bottom of the tray until it locks into position.

ADDING YOUR SLIDES: Remove the lock ring by turning it counterclockwise and lifting off. Check each slide's orientation (horizontal or vertical), and arrange them in the order you wish to show them. Then turn them upside down. Place the loaded slide tray on the projector. Align the tray index bar with the projector's gate index. The tray will drop into position.

FORWARD AND REVERSE: Press the forward button on the projector or the remote control to project the first slide. To change slides, briefly press the forward or reverse buttons.

FOCUS: Focus the first slide using the focus knob on the projector or the focus button on the remote control.

RANDOM PROJECTION: For random projection of any slide in the tray: 1) press and hold down the select bar, 2) rotate the tray to the desired slide, and 3) release the select bar.

SCREEN IMAGE: Use the elevating foot to horizontally center the projected image on the screen. To release the foot, press the release button, while lifting the front of the projector to the desired height. Use the elevating wheel to make fine adjustments. If the image is not level, make an adjustment by turning the leveling foot at the rear of the projector.

CLEARING A GATE JAM: To remove a defective slide or foreign object stuck in the projector gate, you need to remove the tray. Slide the tray release latch in the direction of the arrow, and with the other hand, lift off the back of the tray. For an 80-slide tray, rotate the metal plate until it locks into position. Put the tray aside. Remove the slide or object from the projector gate by pressing the forward button or removing the slide manually. Remount damaged slides to protect the projector and slides from subsequent damage.

SHUTDOWN: Remove and store the slide tray. Slide the power switch to off. The projector will remain warm for a few minutes.

CHANGING THE PROJECTION LAMP: Slide the power switch to Off and unplug the projector. Allow the projector and lamp to cool off for about 10 minutes. Push the lamp-module release button and remove the lamp module. Lift up the lamp release clip. Carefully remove the worn lamp from the socket and place it on a heat-resistant surface. Insert a new lamp into the socket. Push down to lightly seat the replacement lamp. Re-latch the clip in the forward position and push the lamp module all the way back into the projector until it latches.

Need It. Rent It!